

End-Fix End Cap Replacement

FITTING INSTRUCTIONS

- 1 Ensure roof glazing (B) has not slipped below the end of the glazing bar (A), and push back inline if it has.
- 2 Position Retaining Plate (C) to best cover glazing and align closest pre-drilled screw holes to glazing bar screw port.
- 3 Using supplied Screw (E) secure Retaining Plate (C) and Lug (D) to the glazing bar.
- 3 Slide the End Cap (F) down to lock it securely onto the Lug (D).

Kit Includes:

Aluminium Roof Glazing Retainer (C)
Plastic Lug (D)
End Cap (F)
Standard Screw (E)

