
TRULY PVC



FITTING INSTRUCTIONS

- Ensure roof glazing (A) has not slipped past end of Glazing Bar (B)
- 2 Raise end of Top Cap (C) to allow side fixing.
- 3 Assemble Glazing Retainer (D) and slide alongside Glazing Bar (position to whichever side allows a more central fitting).
- 4 Secure Glazing Retainer with Self-Drilling Screws (G), and knock Top Cap back down into position.
- 5 Position the plastic Lug (E) over preferred front plate hole and secure with provided Standard Screw (H).
- 6 Now slide End Cap (F) down onto Lug to finish.

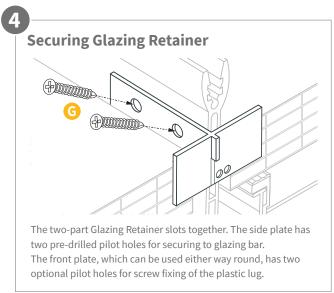

Kit Includes: Glazing Retainer (D), End Cap Lug (E), End Cap (F), 2 x Self-Drilling Screws (G), Standard Screw (H).



^{*} We recommend the use of a cordless electric drill.